



Switch-It™ Wireless Controls for AireShare™ Transfer Fans *The easy way to switch on comfort*


- Quickly install activation controls where you want to optimize use and comfort
- Eliminate costly and difficult wiring in finished walls

Model SWT Wireless Thermostat Automatic Activation

In heat transfer applications mount the SWT wireless digital thermostat in the receiving room and set to the desired temperature. The AireShare™ Transfer Fan will operate any time the temperature in the room is below the set point. The fan can also be activated in a manual mode by depressing the on or off buttons on the thermostat.



Transmit up to 80' through walls and ceilings

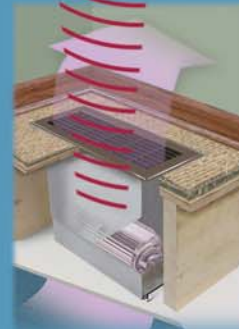

ASLL Level-To-Level Transfer Fan



AS1 Room-To-Room Transfer Fan

Model SWS Wireless Switch Manual Activation

In either heating or cooling applications mount the SWS wireless wall switch in any convenient location. Modern rocker style switch in off white.



Both Models Feature:

- Operational range of up to 80 feet through walls and floors.
- 2 3/4" x 5" receiver fits in AireShare junction box.
- Unique security codes to prevent cross communication when multiple units are installed within the same area.
- Receiver switch contacts rated for up to 3 Amps @ 120 Volts.
- Batteries for the wireless transmitter and mounting hardware.

Also available:

Model SWR Wireless Outlet

Plug-in receiver and wireless remote. Control any plug-in device up to 15 AMP/1800 watts via a wireless on/off remote up to 80 feet from plug-in receiver.



Available from:



TJERNLUND PRODUCTS, INC.

1601 Ninth Street White Bear Lake, MN 55110-6794
Phone: 651.426.2993 800.255.4208 Fax: 651.426.9547
Visit our web site: www.tjernlund.com

Copyright © 2012 Tjernlund Products, Inc. All rights reserved. P/N 8500732